



GoMoG Service List

STEERING BOX

Check column end float – Lube top bush (steering box cars) [Steering Section 5](#)

Check oil level (steering box cars) [Steering Section 5](#)

[Check oil seals](#) on steering box (steering box cars) [Steering Section 5](#)

Adjust nut or peg [Gemmer](#) or [Burman](#) (steering box cars) [Steering Section 5](#)

Check split pin on drag link clamp (steering box cars) [Steering Section 5](#)

Check play and lube ball joints on drop arm, drag link and coupling bars (steering box cars)

Check and lube U-Js on steering column [Steering Box](#)