


BS AU7a 1983

black		all earth connections
black	blue	tachometer generator to tachometer
black	red	tachometer generator to tachometer
black	purple	temperature switch to warning light
black	green	relay to radiator-fan motor
black	light green	vacuum brake switch or brake differential pressure valve to warning light and/or buzzer
black	white	brake fluid level warning light to switch and handbrake switch, or radio to speakers
black	yellow	electric speedometer
black	orange	radiator fan motor to thermal switch
blue		lighting switch (head) to dip switch
blue	brown	headlamp relay to headlamp fuse
blue	red	dip switch to headlamp dip beam fuse
		fuse to right-hand dip headlamp
blue	light green	headlamp wiper motor to headlamp wash pump motor
blue	white	dip switch to headlamp main beam fuse
		headlamp flasher to main beam fuse
		dip switch main beam warning light
		dip switch to long-range driving light switch
blue	yellow	long-range driving light switch to lamp
blue	black	fuse to right-hand main headlamp
blue	pink	fuse to left-hand dip headlamp
blue	slate	headlamp main beam fuse to left-hand headlamp; or inboard headlamps when independently fused
		fuse to right-hand dip headlamp
blue	orange	main battery lead
brown		control box (compensated voltage only) to ignition switch and lighting switch (feed)
brown	blue	compression ignition starting aid to switch
brown	red	main battery feed to double pole ignition switch
		alternator regulator feed
brown	purple	dynamo 'F' to control box 'F'
brown	green	alternator field 'F' to control box 'F'
		ammeter to control box
brown	white	ammeter to main alternator terminal
brown	yellow	alternator to 'no charge' warning light
brown	black	alternator battery sensing lead
brown	slate	starter relay contact to starter solenoid
brown	orange	fuel shut-off (diesel stop)
green		accessories fused via ignition switch
green	brown	switch to reverse lamp
green	blue	water temperature gauge to temperature unit
green	red	direction indicator to left-hand flasher lamps
green	purple	stop lamp switch to stop lamp, or stop lamp switch to lamp failure unit
green	light green	hazard flasher unit to hazard pilot lamp or lamp failure unit to stop lamp bulbs
green	white	direction indicator switch to right-hand flasher lamps
green	yellow	heater motor to switch single speed (or to 'slow' on two-or-three-speed motor)
green	black	fuel gauge to fuel tank unit or changeover switch or voltage stabiliser to tank units
green	pink	fuse to flasher unit
green	slate	heater motor to switch ('fast' on two-or-three-speed motor)
		coolant level unit to warning light
green	orange	low fuel level switch to warning light
light green		instrument voltage stabiliser to instruments
light green	brown	flasher switch to flasher unit
light green	blue	flasher switch to left-hand flasher warning light
		coolant level sensor to control unit
light green	red	test switch to coolant level control unit
		fuel tank changeover switch to right-hand tank unit; or entry and exit door closed switch to door actuator
light green	purple	flasher unit to flasher warning light
light green	green	start inhibitor realy to change speed switch; or switch to heater blower motor second speed on three-speed unit
light green	white	low air pressure switch to buzzer and warning light
light green	yellow	flasher switch to right-hand warning light; or differential lock switch to differential lock warning light
light green	black	front screen jet switch to screen jet motor
light green	slate	fuel tank changeover switch to left-hand tank unit; or entry and exit door open switch to door actuator
light green	orange	rear window wash switch to wash pump; or cab lock-down switch to warning light

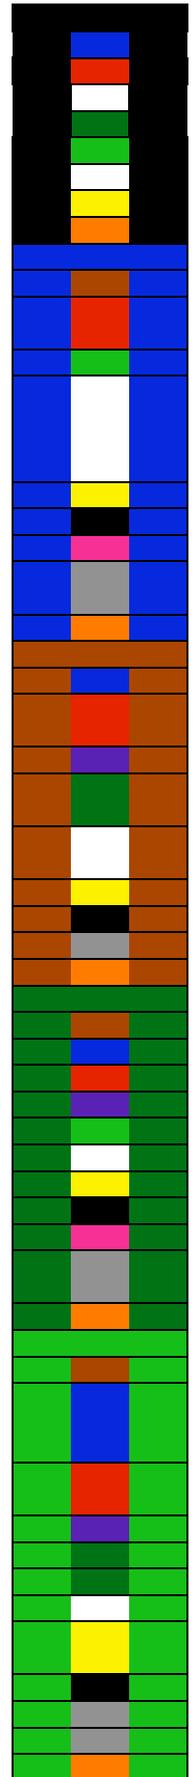

BS AU7a 1983

orange		wiper circuits fused via ignition switch
orange	blue	switch to front screen wiper motor first speed timer or intermittent unit
orange	green	switch to front screen wiper motor second speed
orange	black	switch to front screen wiper motor parking circuit, timer or intermittent unit
orange	purple	timer or intermittent unit to motor parking circuit
orange	white	timer or intermittent unit to motor parking circuit
orange	yellow	switch to headlamp or rear window wiper motor feed, timer or relay coil
orange	light green	switch to headlamp or rear window wiper motor parking circuit timer or relay coil
orange	pink	timer or relay to headlamp or rear window wiper motor feed
orange	slate	timer or relay to headlamp or rear window wiper motor parking circuit
pink	white	ballast terminal to ignition distributor
purple	brown	horn fuse to horn relay when horn is fused separately
purple	blue	fuse to heated rear window relay or switch and warning light
purple	red	switches to map, under-bonnet, glove-box and boot lamp fed direct from battery fuse
purple	green	fuse to hazard flasher
purple	light green	fuse to relay for screen demist
purple	white	interior lights to switch (subsidiary circuit door safety lights to switch)
purple	yellow	horn to horn relay
purple	black	horn to horn relay to horn push
purple	pink	rear heated window to switch or relay
purple	slate	aerial lift motor to switch up
purple	orange	aerial lift motor to switch down
red		main feed to all circuits mastered by sidelamp switch
red	brown	rear fog guard switch to lamps
red	blue	front fog lamp fuse to foglamp switch
red	purple	switches to map, under-bonnet, glove-box and boot lamp when sidelamp circuit fed
red	green	bulb failure unit to right-hand-side and rear lamps
red	white	sidelamp fuse to right-hand side and rear lamps
		sidelamp fuse to panel light rheostat
		fuse to panel light switch or rheostat
		fuse to fibre optic source
red	yellow	fog lamp switch to fog lamp or front fog fuse to fog lamps
red	black	left-hand, sidelamp fuse to side, tail and number plate lamps
red	pink	sidelamp fuse to lighting relay
red	slate	lamp failure unit to left-hand side and tail lamps
red	orange	fusebox to rear fog guard switch
slate		window lift main lead
white		ignition switch or starter solenoid to ballast resistor
white	brown	oil pressure switch to warning light or gauge, or starter relay to oil pressure switch
white	blue	choke switch to choke solenoid (unfused) and/or choke to switch to warning light; or electronic ignition distributor to drive resistor
white	red	starter switch to starter solenoid or inhibitor switch or starter relay; or ignition (start position) to bulb failure unit
white	purple	fuel pump number 1 or right-hand to changeover switch
white	green	fuel pump number 2 or left-hand to changeover switch
white	light green	start switch to starter interlock; or oil pressure switch to fuel pump; or start inhibitor switch to starter relay or solenoid
white	yellow	ballast resistor or coil or starter solenoid to coil
white	black	ignition coil contact breaker to distributor contact breaker; or distributor side of coil to voltage impulse tachometer
white	pink	ignition switch to radio fuse
white	slate	current tachometer to ignition coil
white	orange	hazard warning lead to switch
yellow		overdrive
		petrol injection
		door locks
		gear selector switch to start

