


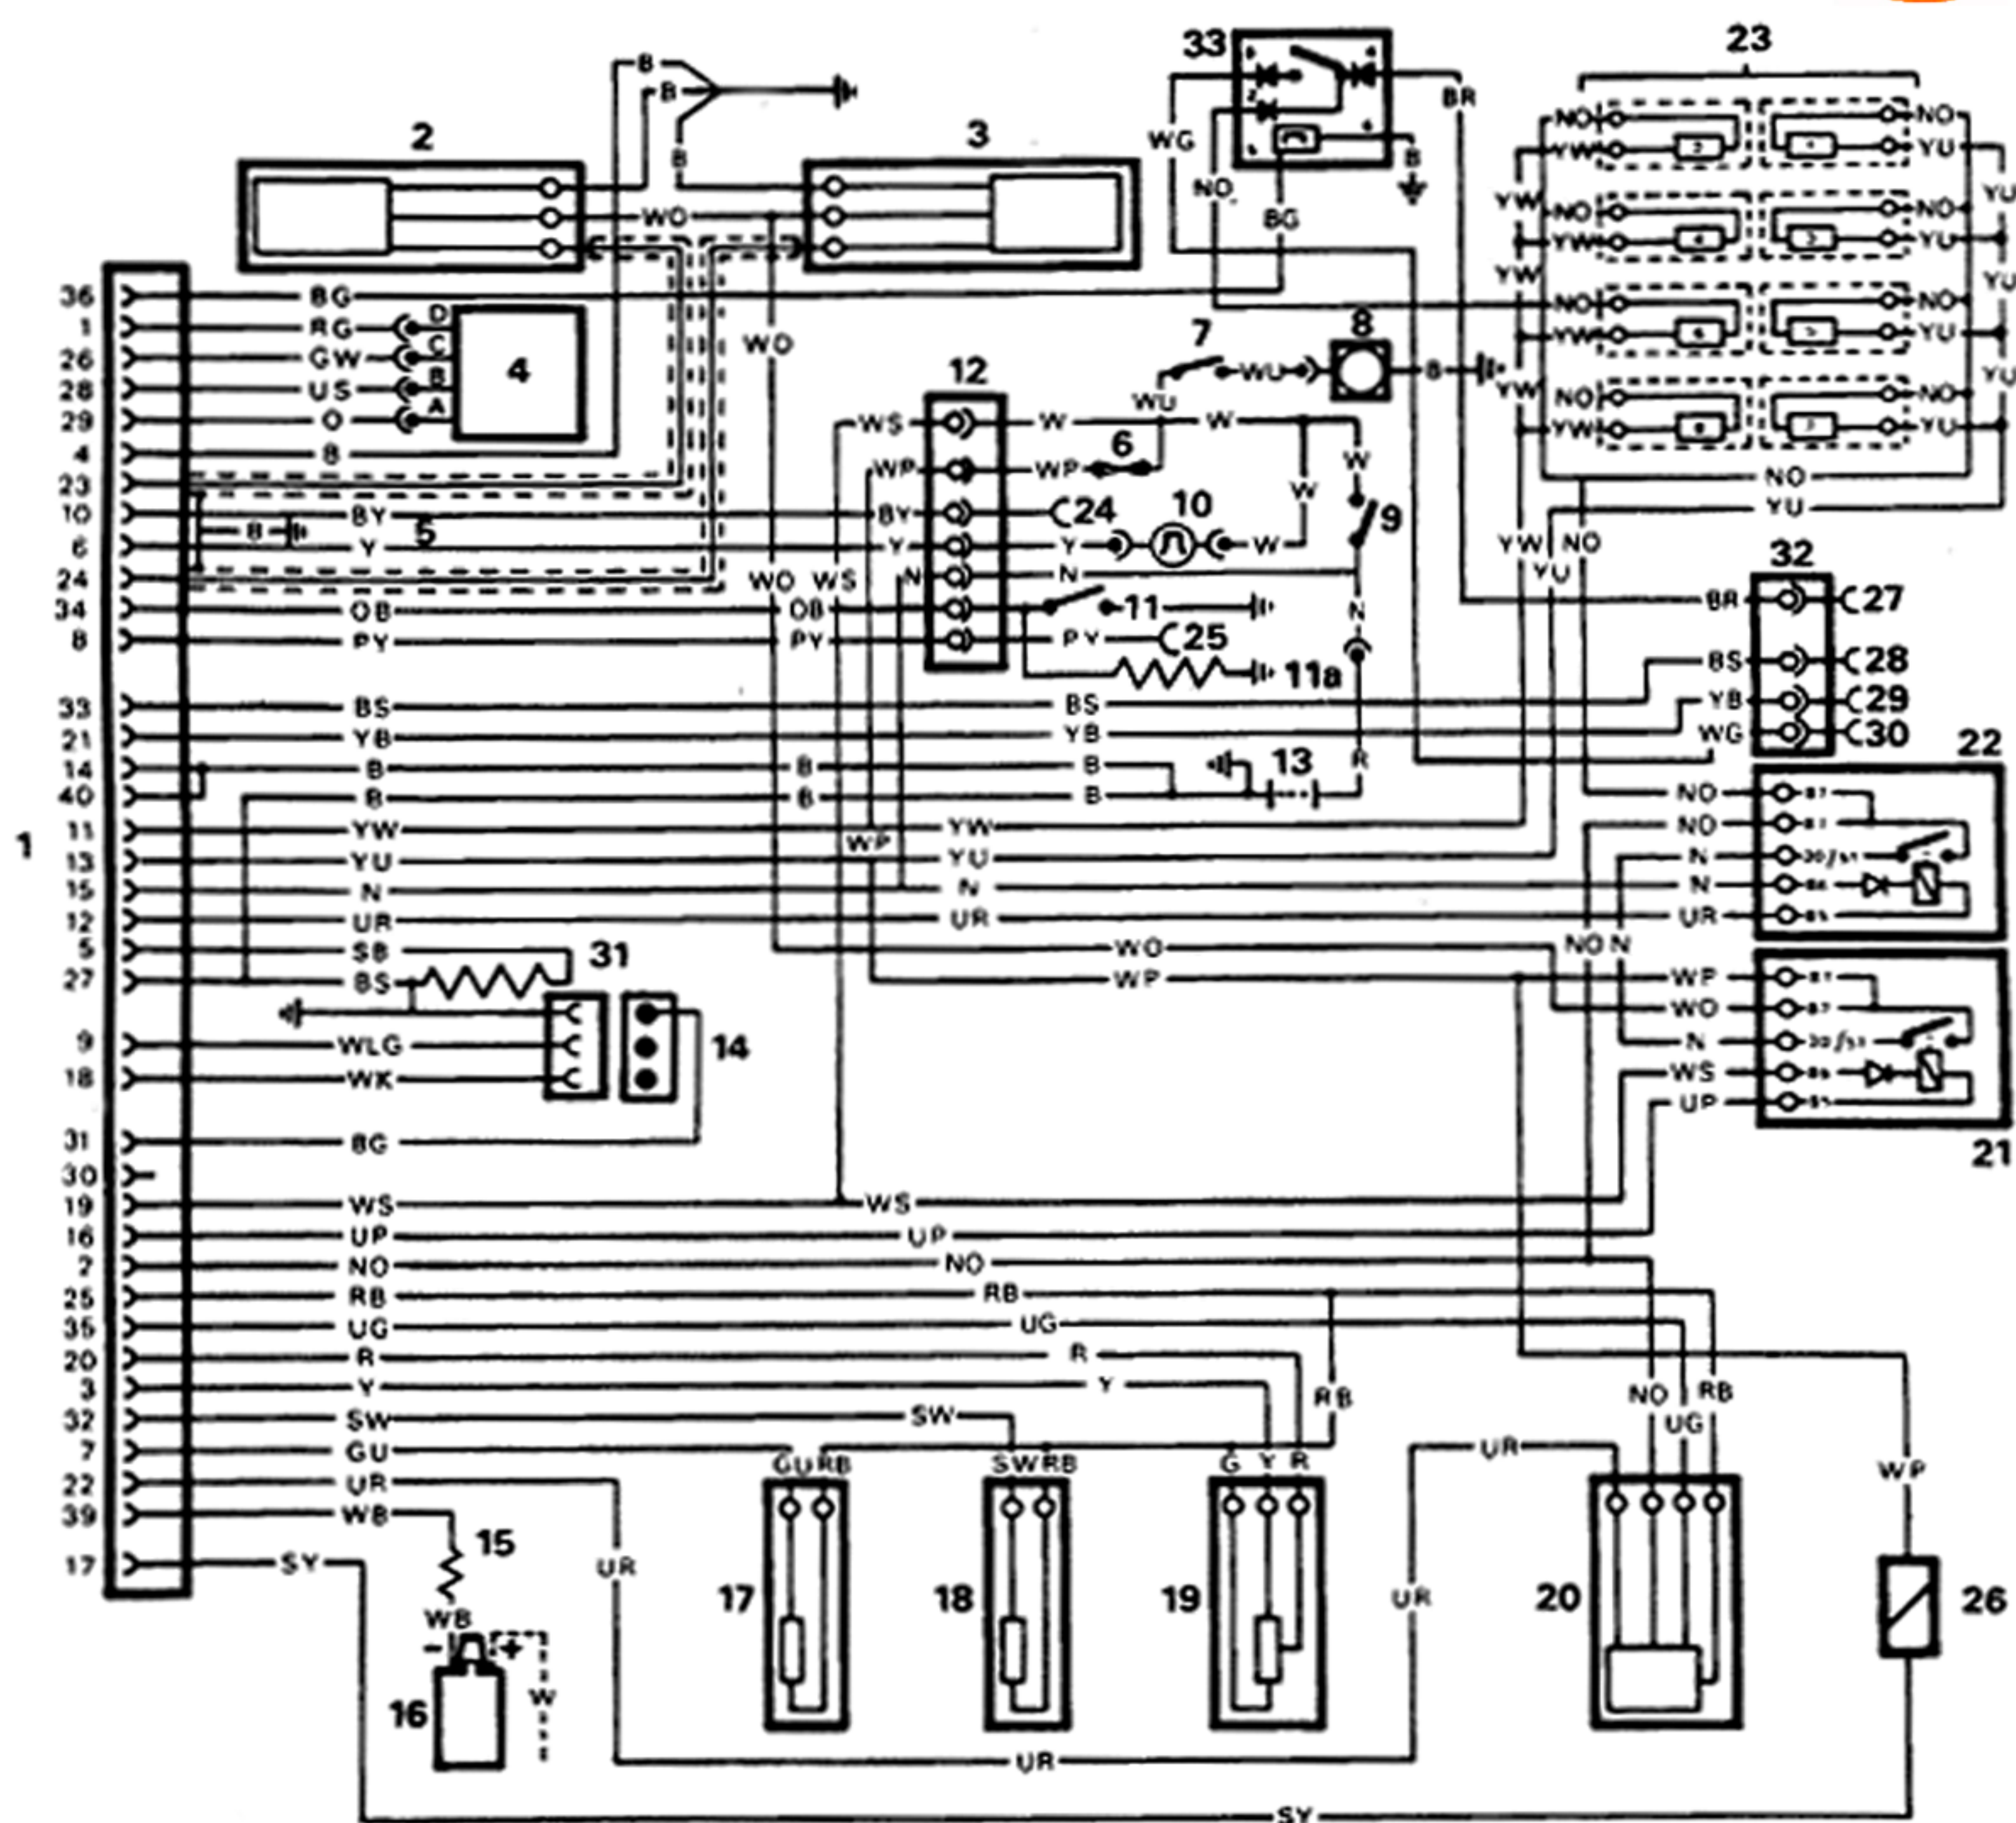

1. (ECU). 40 Way connector
 2. Lambda sensor (left bank A)
 3. Lambda sensor (right bank B)
 4. By-pass air valve (stepper motor)(fast idle)
 5. Lambda sensor screened ground
 6. Fuse C4 - main fuse panel
 7. Interia switch
 8. Fuel pump
 9. Ignition switch
 10. Speed transducer (road speed input)
 11. Neutral switch (automatic gearbox)(load input)
 12. Main cable connector
 13. Battery
 14. Diagnostic plug
 15. In-line resistor
 16. Coil/-ve (engine RPM input)
 17. Coolant temperature thermistor (sensor)(input)
 18. Fuel temperature thermistor (sensor)(input)
 19. Throttle potentiometer
 20. Air flow sensor
 21. Fuel pump relay
 22. Main relay
 23. Injectors-1 to 8
 24. Pick-up point E.F.I. warning symbol instrument binnacle
 25. Heated front screen sense
 26. Purge control valve-if fitted
 27. 12V from fan relay
 28. Air conditioning output control
 29. Air conditioning load input
 30. Fan relay feed
 31. Tune resistor
 32. Heater/air con. cable connector
 33. Condenser fan timer control
 34. Resistor (manual gearbox)
- = = = Denotes screened ground

NOTE: Lambda sensors fitted to catalyst vehicles only.