



**2 SEATER—4 SEATER
COUPÉ**

1 16 4
1- 7- 14
3 3- 8

**SPARE PARTS
• LIST •**

Price - 1/6

**MORGAN MOTOR CO., LTD.
MALVERN LINK, WORCS.**

Telephone : Malvern 106

Telegrams : Morgan Motors

INDEX

SECTION	Page
CHASSIS FRAME	3
ENGINE :—	
CYLINDER BLOCK	3
ROCKER COVER	3
SUMP	3
ENGINE PLATE AND MOUNTINGS	3
TIMING COVER	4
CRANKSHAFT AND BEARINGS	4
CONNECTING ROD	4
PISTONS	4
VALVE GEAR AND ROCKERS	4
CAMSHAFT	5
OIL PUMP AND FILTER	5
DIPSTICK	5
FLYWHEEL	5
PETROL PUMP	5
CARBURETTOR	5
AIR CLEANER	5
WATER PUMP	5
MANIFOLD	5
CLUTCH	6
COOLING SYSTEM	6
FUEL SYSTEM	6
EXHAUST SYSTEM	7
SUSPENSION :—	
FRONT	7
REAR	8
AUTO-LUBRICATION	7
HUBS—FRONT	8
WHEELS	8
BRAKES	8
STEERING	10
GEARBOX	11
TRANSMISSION	12
REAR AXLE	12
BODY DETAILS	13
ELECTRICAL	15
TOOLS	15

INSTRUCTIONS FOR ORDERING SPARE PARTS

Obtain your spare parts from accredited Morgan dealers or write us direct and observe the instructions following :—

TERMS.—Our terms are strictly cash and remittance should at all times accompany order, otherwise goods are sent C.O.D. if within the postage weight limit, but orders under the value of 5/- are not sent by this system in view of the additional postage fees and office formalities involved.

Prices shown in this list do not include postage or carriage, and sufficient should be added to cover.

When ordering give the chassis and engine numbers, not registration number.

Make all enquiries the subject of a separate letter. Do not embody them in your spare parts order, otherwise there will be delay in replying.

Parts sent as patterns should be clearly labelled with the sender's name and address. Instructions and remittances should not accompany patterns but should be sent separately. Patterns are not returned unless asked for at the time of ordering.

Cheques and postal orders should be made payable to the firm and crossed. Notes should in all cases be registered. When remitting by telegraphic money order a separate telegram of advice should be sent.

NOTE.—The terms "L.H." (left hand) and "R.H." (right hand) used throughout this list at all times mean "near" (passenger) side and "off" (driver's) side, respectively.

Packing Cases are chargeable but returnable.

CHASSIS FRAME

Part Number	Description	Price £ s. d.
V4-1-61.	Chassis Frame with front cross axles, rear cross member, side stays, tie rods. 2-str. and Coupe ...	28 15 0
	4-str. ...	28 12 6
V4-1-63.	Front Cross Axle Assembly : with tie rods ...	8 15 0
V4-1-71.	Tie Rod with Nuts ...	2 6
V4-1-91.	Side Stay ...	2 6
V4-1-76.	Rear Cross Member with Spare Wheel Carrier Pillar. 2-str. and Coupe ...	3 12 6
V4-1-77.	Rear Cross Member. 4-str. ...	3 10 0
V4-1-113.	Floor Boards for Frame, complete set ...	4 13 3
V4-1-27.	Cover for Jack aperture ...	1 9
V4-1-20.	Rear Axle Rubber ...	2 0
V4-1-65.	Cross Tube—top ...	7 6
V4-1-66.	" " bottom ...	7 6
V4-1-67.	End Lug—top R.H. ...	12 6
V4-1-68.	" " L.H. ...	12 6
V4-1-69.	" " bottom ...	6 9
V4-1-70.	Plate—bottom end lug ...	3 0

ENGINE

Parts not shown, as Current Vanguard List

GASKET SET		
V4-10-50	Set Complete ...	17 3
CYLINDER BLOCK		
V4-10-51.	Cylinder Block Assembly ...	29 10 0
V4-10-52.	Felt, rear bearing cap ...	4
V4-10-53.	Core Plug, rear end camshaft ...	3
V4-10-54.	" " oil gallery ends ...	4
V4-10-55.	Drain Tap ...	4 0
V4-10-56.	Fibre Washer, drain tap ...	1
V4-10-57.	Stud, timing cover ...	4
V4-10-58.	Cylinder Head Assembly ...	14 0 0
V4-10-59.	Core Plug, top ...	7
V4-10-60.	" " rear ...	3
V4-10-61.	Gasket, cylinder head ...	5 9
ROCKER COVER		
V4-10-62.	Rocker Cover Assembly ...	17 6
V4-10-63.	Oil Filter Cap Assembly ...	2 9
V4-10-64.	Washer, cover ...	2 3
V4-10-65.	Dome Nut, cover attachment ...	7
SUMP		
V4-10-66.	Oil Sump Assembly ...	1 9 0
V4-10-67.	Drain Plug ...	1 2
V4-10-68.	Washer, sump ...	1 7
ENGINE PLATE AND MOUNTINGS		
V4-10-69.	Front Plate, engine ...	14 9
V4-10-69-I.	Rubber Mounting ...	4 0
V4-1-75.	Bearer Bracket—R.H. ...	18 0
V4-1-74.	" " L.H. ...	17 6

Part Number	Description	Price £ s. d.
TIMING COVER		
V4-10-70.	Timing Cover Assembly	5 0
V4-10-71.	Joint, for cover	1 3
V4-10-72.	Chain-tensioner	1 6
CRANKSHAFT AND BEARINGS		
V4-10-73.	Crankshaft	14 0 0
V4-10-74.	Main Bearing (pair)	5 5
V4-10-75.	" " " " " " " " " "	6 6
V4-10-76.	" " " " " " " " " "	6 6
V4-10-77.	" " " " " " " " " "	6 6
V4-10-78.	Thrust Washer, top	1 3
V4-10-79.	" " bottom	1 3
V4-10-80.	Chain Wheel	10 6
V4-10-81.	Pulley Hub	15 0
V4-10-82.	" Assembly	5 0
V4-10-83.	Starter Jaw Assembly	10 6
CONNECTING ROD		
V4-10-84.	Connecting Rod Assembly, with bolts	2 2 0
V4-10-85.	Bush, connecting rod, small end	1 0
V4-10-86.	Bearing, connecting rod (pair)	3 6
V4-10-87.	" " " " " " " " " "	4 6
V4-10-88.	" " " " " " " " " "	4 6
V4-10-89.	" " " " " " " " " "	6 3
V4-10-90.	Bolt, connecting rod	1 6
PISTONS		
V4-10-91.	Piston Assembly, split skirt	1 10 6
V4-10-92.	" " plus .020"	2 5 0
V4-10-93.	" " ".030"	2 5 0
V4-10-94.	Pressure Ring, top	5 0
V4-10-95.	" " " plus .020"	4 6
V4-10-96.	" " " ".030"	5 0
V4-10-97.	" " " " " " " " " "	3 0
V4-10-98.	" " " plus .020"	2 2
V4-10-99.	" " " ".030"	2 2
V4-10-100.	Scraper Ring	2 8
V4-10-101.	" " plus .020"	2 8
V4-10-102.	" " ".030"	2 8
V4-10-103.	Gudgeon Pin	5 6
V4-10-104.	Circlip	4
VALVE GEAR AND ROCKERS		
V4-10-105.	Tappet, in block	2 6
V4-10-106.	Push Rod	2 1
V4-10-109.	Inlet Valve	6 3
V4-10-110.	Exhaust Valve	7 0
V4-10-111.	Spring Collar	8
V4-10-112.	Valve Spring, outer	1 7
V4-10-113.	" " inner	10
V4-10-114.	" " " auxiliary	2 3
V4-10-115.	" Collar	1 6
V4-10-116.	" Spring, outer	1 7
V4-10-117.	Valve Cap	3 8
V4-10-118.	Rocker Shaft	10 0
V4-10-119.	" Spring, centre	0

Part Number	Description	Price £ s. d.
V4-10-120.	Rocker Pedestal, drilled	3 6
V4-10-121.	" " plain	2 9
V4-10-122.	" Spring, intermediate	3
V4-10-123.	" " outer	3
V4-10-124.	" No. 1 Assembly, with bush	5 0
V4-10-125.	" Bush	4
V4-10-126.	" No. 2 Assembly, with bush	5 0
V4-10-127.	Valve Guide, in combustion head	1 0
CAMSHAFT		
V4-10-128.	Camshaft	3 6 0
V4-10-129.	Bearing, camshaft, front, phosphor bronze	10 0
V4-10-130.	Chain-wheel, on camshaft	17 6
V4-10-131.	Timing Chain	1 0 0
OIL PUMP AND FILTER		
V4-10-132.	Oil Pump Assembly	1 12 6
V4-10-133.	Oil Filter Assembly, sump suction	14 6
V4-10-134.	Oil Filter Element (Percolator)	10 6
DIPSTICK		
V4-10-135.	Engine Dipstick Assembly	2 6
FLYWHEEL		
V4-10-136.	Flywheel Assembly	3 18 6
V4-10-137.	Gear, ring	1 11 0
PETROL PUMP		
V4-10-138.	Fuel Pump (A.C.)	2 0 0
V4-10-139.	Washer	5
CARBURETTOR		
V4-10-140.	Carburettor	8 15 0
V4-10-141.	Air Jet, G.A. air correction	2 6
V4-10-142.	Petrol Jet, G.S. Starter	3 9
V4-10-143.	Main Jet (No. 120, 135 or 140)	1 10
V4-10-144.	Auxiliary Jet, pilot	3 0
V4-10-145.	Choke Tube (No. 23 or 25)	6 8
V4-10-146.	Float	4 10
WATER PUMP		
V4-10-147.	Water Pump Assembly	4 15 0
V4-10-148.	Housing, with grease nipple	10 7
V4-10-149.	Gasket, water pump housing to body	2
V4-10-150.	" pump to cylinder block	2
V4-10-151.	Fan Pulley, and extension	1 11 6
V4-10-152.	Fan	8 0
V4-10-153.	" Belt	9 6
V4-10-5.	Fan Pulley, extension and fan assembly	1 19 6
MANIFOLD		
V4-10-154.	Exhaust Manifold	2 15 0
V4-10-155.	Inlet "	2 4 9
V4-10-156.	Manifold Joint	6
V4-10-157.	Exhaust Manifold Assembly	4 11 6

Part Number	Description	Price £ s. d.
CLUTCH		
V4-11-44.	Cover Assembly, containing springs, pressure plate and toggle	4 7 5
V4-11-48.	Cover only	16 0
V4-11-49.	Thrust Spring	1 0
V4-11-50.	Pressure Plate	1 7 0
V4-11-51.	Eye Bolt	2 4
V4-11-52.	Nut, Eye Bolt	7
V4-11-53.	Release Lever	1 7
V4-11-54.	Anti-Rattle Spring	7
V4-11-45.	Driven Plate Assembly	2 7 9
V4-11-47.	Facings and Rivets, driven plate	16 4
V4-11-31.	Sleeve, throw out, with carbon ring... ..	1 5 9
V4-11-38.	Carbon Ring	5 9
V4-11-34.	Eye Bolt, sleeve... ..	1 9
V4-11-35.	Rod, throw out with yoke ends	1 6
V4-11-39.	Yoke End, rod, L.H. Thread	1 3
V4-11-40.	" " " R.H. "	1 3
V4-11-33.	Lever, actuating	3 0
V4-11-41.	Spring, return	9
V4-11-36.	Pedal	5 0
V4-11-22.	Rubber, pedal	2 9
V4-11-29.	Lever, pedal shaft	3 6
V4-11-32.	Link, lever to rod	3
V4-11-42.	Dowel Pin, long	9
V4-11-43.	" " short	9
V4-11-30.	Housing and transmission tube	7 10 0
V4-11-46.	Sealing Rubber Ring, housing... ..	8 6

COOLING SYSTEM		
V4-2-1.	Radiator c/w grille, badge, filler car and hinged number plate	28 15 0
V4-2-44.	Grille	4 15 0
V4-1-103.	Badge	15 0
V4-2-2.	Filler Cap	6 9
V4-2-7.	Drain Tap and Washer	5 0
V4-2-28.	Tape and Rivets	9 6
V4-2-42.	Support Bracket	2 6
V4-2-39.	Rubber Mounting Pad	6
V4-2-6.	Block	10 7 3
V4-2-8.	Shell (Chromium Plated)	4 15 0
V4-2-5.	Relief Valve Assembly	3 6
V4-2-52.	Hose—top	2 0
V4-2-45.	" bottom	6 6
V4-2-53.	Clip, hose, top	9
V4-2-47.	" " bottom	1 3
V4-2-17/18/19.	Number Plate and Hinge Assembly	17 9
V4-2-19.	Hinge	4 6
V4-2-55.	Hinged Plate Assembly (used with bumper)	10 6
V4-2-43.	Tie Bar	3 6

FUEL SYSTEM		
V4-9-54.	Tank, 2-Str.	3 12 6
V4-9-57.	" Coupe	3 12 6
V4-9-58.	" 4-Str.	3 12 6
V4-9-4.	Tank Drain Plug	9

Part Number	Description	Price £ s. d.
V4-9-9.	Filler Cap—2-Str. and Coupe	1 10 0
V4-2-2.	" " 4-Str.	6 9
V4-9-47.	Accelerator Cable Assy.—R.H. Drive	5 0
V4-9-16A.	" " " L.H. "	6 0
V4-9-52.	" Pedal Assembly	10 6

For Fuel Pump and Carburettor refer to engine section

EXHAUST SYSTEM		
V4-8-20.	Bend—Manifold to Flexible Pipe	8 6
V4-8-30.	Flexible Pipe	1 4 9
V4-8-22.	Silencer	1 17 6
V4-8-24.	Tail Pipe	1 1 3
V4-8-21.	Clip, flexible pipe	2 3
V4-8-29.	Clip, silencer	2 6
V4-8-32.	Flange, manifold	2 4
V4-8-31.	Washer, flange	8
V4-8-23.	Rubber, silencer, plain... ..	6
V4-8-28.	" " shaped	6
V4-8-16.	" tail pipe, plain	6
V4-8-17.	" " shaped	6
V4-8-25.	Bracket, silencer, front	2 3
V4-8-26.	" " rear	2 3
V4-8-27.	" tail pipe	2 3

SUSPENSION — FRONT		
V4-3-48.	Main Spring	10 6
V4-3-4.	Rebound Spring	6 0
V4-3-45.	Dust Cover	2 6
V4-3-41.	Sliding and Stub Axle Assy., with bushes—R.H.	3 19 3
V4-3-42.	" " " " " " " L.H.	3 19 3
V4-3-39.	King Pin	12 4
V4-3-40.	Union Bolt, auto lubrication	5 0
V4-3-9.	Bush	8 3
V4-3-57.	Steering Damper Assembly—L.H.	14 3
V4-3-57A.	" " " R.H.	14 3
V4-3-51.	Shock Absorber	2 15 0
V4-3-46.	" " Fixing Pin	2 0
V4-3-47.	" " Bracket	3 0
V4-3-50.	" " Rubber—top	9
	" " " bottom	9
V4-3-55.	Steering Damper Blade—L.H.	2 6
V4-3-55A.	" " " R.H.	2 6
V4-3-56.	Clamp for Blade	9

AUTO LUBRICATION—FRONT SUSPENSION		
V4-1-92.	Valve Assembly	1 7 6
V4-1-90.	Oil Pipe Assembly valve to stub axle	15 0
V4-1-87.	Oil Pipe, valve to flexible pipe	1 6
V4-1-88.	" " " oil gauge	8 6
V4-1-114.	Flexible Pipe	3 10

Part Number	Description	Price £ s. d.
SUSPENSION—REAR		
V4-3-20.	Spring	2 10 0
V4-3-31-2-3.	" Hanger Bolt Washer and distance piece ...	1 9
V4-3-34.	Silentbloc Bush	6 3
V4-3-52.	Shock Absorber—L.H.	3 10 6
V4-3-53.	" " R.H.	3 10 6
V4-1-19.	Spring Slipper	7 6
V4-1-29.	Pin, spring slipper	9

HUBS—FRONT		
V4-4-2.	Hub and Combined Brake Drum	3 10 0
V4-4-3.	Inner Ball Race Locking Ring	2 6
V4-4-5A.	Wheel Stud	2 3
V4-4-8.	Ball Race Spacer	2 6
V4-4-12.	Ball Race—inner	Maker's List
V4-4-13.	" " outer	" "
V4-4-3.	Locking Ring for Inner Ball Race	2 6
V4-4-14.	Oil Seal	5 7
V4-4-10.	Hub Securing Nut	9
V4-4-9.	Washer	3
V4-4-11.	Hub End Cap	6 6

WHEELS		
V4-6-5.	Wheel	4 8 6
V4-6-4.	Disc	15 6
V4-4-7A.	Wheel Nut	2 6
V4-1-94.	Clamp, spare wheel, 2-Str. and Coupe	1 1 6
V4-1-103.	Badge	15 0
V4-1-37.	Thumb screw	9 6
V4-6-7.	Cover, 5.25—16	Maker's List
V4-6-8.	Tube	" "

BRAKING SYSTEM		
FRONT		
V4-5-84.	Brake Plate Assembly—L.H.	16 6
V4-5-85.	" " R.H.	16 6
V4-5-79.	Shoe and Lining (pair)	1 3 0
V4-5-102.	Cylinder Assembly—L.H.	12 10
V4-5-103.	" " R.H.	12 10
V4-5-104.	Cylinder Body—L.H.	8 0
V4-5-105.	" " R.H.	8 0
V4-5-106.	Spring	5
V4-5-107.	Seal Support	4
V4-5-108.	Seal	11
V4-5-109.	Piston	1 6
V4-5-110.	Dust Cover	6
V4-5-112.	Bleed Screw	1 0
V4-5-113.	Dust Cap	2
V4-5-116.	Bridge Pipe Assembly	3 10
V4-5-117.	Spring, shoe, return	11
V4-5-67.	Pedal	7 6
V4-11-22.	" Rubber	2 9

Part Number	Description	Price £ s. d.
REAR		
V4-5-118.	Back Plate	14 9
V4-5-119.	Shoe and Linings (pair)	1 3 0
V4-5-120.	Adjuster Unit	16 6
V4-5-121.	Cylinder Assembly—L.H.	1 17 6
V4-5-122.	" " R.H.	1 17 6
V4-5-123.	" " Body—L.H.	15 1
V4-5-124.	" " R.H.	15 1
V4-5-126.	Seal Support	7
V4-5-127.	Seal	11
V4-5-128.	Piston	3 8
V4-5-129.	Dust Cover	7
V4-5-130.	Tappet	1 1
V4-5-131.	Roller	1 2
V4-5-132.	Draw Link	5 11
V4-5-133.	Cover Plate	8
V4-5-136.	Dust Cover Plate	6
V4-5-137.	" " Rubber—L.H.	2 7
V4-5-138.	" " R.H.	2 7
V4-5-140.	Spring, shoe, return, top	11
V4-5-141.	" " bottom	1 0
V4-5-142.	Adjuster Housing	8 8
V4-5-143.	Link—L.H.	2 2
V4-5-144.	" R.H.	2 2
V4-5-145.	Wedge	3 10
V4-5-76.	Brake Rod—R.H.	1 3
V4-5-77.	" " L.H.	9

V4-5-90/1	Supply Tank Assembly	11 3
V4-5-88.	Master Cylinder	3 6 9
V4-5-89.	Stop Light Switch	6 11

HANDBRAKE		
V4-5-97.	Handbrake Lever Assembly	1 2 6
V4-5-73.	Lever	8 3
V4-5-24A.	Pawl Rod	9
V4-5-23A.	Knob, pawl rod	4 6
V4-5-25.	Pawl	1 9
V4-5-27.	Spring, pawl rod	4
V4-5-29.	Pivot Bolt, lever	1 9
V4-5-40.	Ratchet	2 8
V4-5-83.	Cable Assembly—2-Str. and Coupe	17 6
V4-5-96.	" " 4-Str.	17 6
V4-5-93.	Compensator Assembly	1 10 0

FITTINGS, PIPES AND HOSE		
V4-5-90/12.	Four-way Piece	5 1
V4-5-178.	Pipe, Master Cylinder to four-way L.H. 11"	3 1
V4-5-90/5.	" " " " R.H. 31½"	4 7
V4-5-90/6.	" " four-way to front—L.H. 26"	4 1
V4-5-90/7.	" " " " R.H. 48"	5 1

Part Number	Description	Price £ s. d.
V4-5-90/2.	Hose, L. or R.	11 8
V4-5-90/8.	Pipe, four-way to rear hose	7 2
V4-5-90/13.	Tee Piece—hose	5 1
V4-5-179.	Hose, pipe to tee	11 0
V4-5-90/3.	Pipe, tee to rear—L.H.	3 3
V4-5-90/4.	" " " " R.H.	9 5

STEERING

V4-7-56.	Column Complete—R.H. Drive	9 3 9
V4-7-65.	" " " " L.H.	9 3 9
V4-7-71R.	Inner Column and Nut—R.H. Drive	2 9 11
V4-7-71L.	" " " " L.H. "	2 9 11
V4-7-74R.	Cover Plate for Box—R.H. Drive	3 2
V4-7-74L.	" " " " L.H. "	3 2
V4-7-66.	Plug	5
V4-7-76.	Cover Plate Washer	1
V4-7-25.	Drop Arm	15 3
V4-7-82.	Rocker Shaft	1 1 0
V4-7-82.	Bush, rocker shaft	3 8
V4-7-77.	Trunnion Bush	3 8
V4-7-83.	Oil Plug	1 1
V4-7-84.	Key, steering wheel	4
V4-7-57.	Steering Wheel	5 0
V4-7-23.	Wheel Fixing Nut	2 6
V4-7-63.	Column Support Bar—2- and 4-Str.	6 0
V4-7-64.	" " " " Coupe	6 0
V4-7-38.	" Clip, 1 1/2"	4 6
V4-7-38A.	" " " " 1 1/2"	4 6
V4-7-40.	Clip Bolt, long	1 6
V4-7-41.	" " " " short	6
V4-7-52.	Column Fixing Distance Piece—L.H.	3 0
V4-7-53.	" " " " " R.H.	3 0
V4-7-59.	" " " " Bolt	1 3
V4-7-62.	Stop	1 9
V4-7-24.	Rubber Collar	3 6
V4-7-68.	Track Rod Assembly	2 10 0
V4-7-69.	Drag Link	1 5 0
V4-7-58.	Track Rod and Drag Link Assembly	3 15 0
V4-7-54.	" " " " only	5 0
V4-7-55.	Drag Link " " " "	3 6
V4-7-43.	Track Rod End—L.H.	5 6
V4-7-44.	" " " " R.H.	4 6
V4-7-45.	Washer, track rod end—top	9
V4-7-46.	" " " " " bottom	9
V4-7-47.	Pin, track rod	3 3
V4-7-47A.	Rubber Bush, track rod	1 9
V4-7-11.	Lock Nut, track rod and drag link	8
V4-7-27.	Ball Joint Assembly—long pin	13 3
V4-7-28.	" " " " short pin	13 0
V4-7-26.	" " " " Socket	3 6
V4-7-15.	Pin, ball joint—long	3 6
V4-7-13.	" " " " short	2 6
V4-7-14.	Lock Nut	8
V4-7-29.	Spring	6
V4-7-30.	Cup	1 6
V4-7-31.	Adjuster	2 6

Part Number	Description	Price £ s. d.
GEARBOX		
V4-12-120.	Case	6 6 7
V4-12-200.	Cover, top	5 17 8
V4-12-126.	" " end—front	1 18 4
V4-12-128.	Oil Seal	2 4
V4-12-195.	Cover, end—rear	4 19 9
V4-12-196.	Oil Seal	6 2
V4-12-121.	Drain Plug	1 4
V4-12-201.	Cap, top cover	2 8
V4-12-235.	Dipstick Rod	6 7
V4-12-236.	" " Knob	6 0
V4-12-237.	" " Felt Washer	11
V4-12-238.	" " Bush	4 5
V4-12-133.	Primary Shaft	5 16 8
V4-12-125.	Bush	1 9
V4-12-140.	Mainshaft	7 7 7
V4-12-152.	Locking Plunger	1 2
V4-12-153.	Spring	4
V4-12-171.	Countershaft	1 0 5
V4-12-172.	Retaining Pin, front	7
V4-12-173.	Thrust Washer	6 9
V4-12-174.	Retaining Ring	2 9
V4-12-179.	Thrust Washer, inner—rear	6 2
V4-12-180.	" " " " outer " "	5 7
V4-12-181.	" " " " inner—front	5 7
V4-12-134.	Constant Mesh Pinion	2 3 11
V4-12-159.	Speedometer Gear—driver	1 1 4
V4-12-166.	" " " " driven	9 6
V4-12-167.	Bush	15 4
V4-12-156.	Synchro Sleeve 2nd	4 1 3
V4-12-142.	Synchro Sleeve 3rd and top	3 12 4
V4-12-143.	Operating Sleeve	2 10 9
V4-12-157.	Spring, synchro sleeve	2
V4-12-158.	Ball	2
V4-12-207.	Lever, Gear Change	1 15 5
V4-12-208.	Knob	1 4
V4-12-182.	Cluster Gear	12 16 3
V4-12-184.	Reverse Wheel	3 6 10
V4-12-185.	Bush, Reverse Wheel	11
V4-12-183.	Spindle, Reverse Wheel	12 0
V4-12-155.	Gear, 1st	6 2 3
V4-12-154.	" " 2nd	4 18 8
V4-12-147.	" " 3rd	4 5 9
V4-12-146.	Locking Ring	18 1
V4-12-219.	Selector, 1st and 2nd	1 7 0
V4-12-221.	" " 3rd and top	1 0 5
V4-12-223.	" " reverse	1 3 2
V4-12-220.	" " rod, 1st and 2nd	1 15 8
V4-12-218.	Distance Tube	6 7
V4-12-222.	Selector Rod, 3rd and top	1 15 8
V4-12-225.	" " " " reverse	2 0 5
V4-12-217.	Distance Tube	4 5
V4-12-244.	Thimble, Selector Rod	1 9
V4-12-177.	Rubber Washer, layshaft	3
V4-12-178.	" " " " reverse shaft	2
V4-12-135.	Ball Bearing, primary shaft. SKF. 6306	1 4 0
V4-12-136.	Circlip	9

Part Number	Description	Price		
		£	s.	d.
V4-12-137.	Circlip for Primary Shaft		1	4
V4-12-247.	Bearing, tail primary shaft	1	4	3
V4-12-138.	Roller Bearing, constant mesh pinion		6	6
V4-12-141.	Ball Bearing, mainshaft. SKF. RMS11	1	10	0
V4-12-170.	Needle Roller (2nd and 3rd Gear Wheels)		3½	
V4-12-175.	" " (Countershaft)		3½	
V4-12-5.	Bolt, front fixing, long		1	6
V4-12-6.	" " " short		1	6
V4-12-7.	" " " and brake cable stop		1	9
V4-12-8.	" " holding down		2	0
V4-12-10.	Metal Cover	1	17	6
V4-12-11.	*Leather Cover (Purchase Tax 12/2)	3	5	6
V4-1-89.	Silentbloc		9	4
V4-1-80.	Screw, silentbloc			1

*Add Purchase Tax

TRANSMISSION

V4-13-9.	Shaft, engine to gearbox	1	15	0
V4-13-11.	Muff Coupling		11	6
V4-13-12.	*Propellor Shaft Complete	8	3	0
V4-13-16.	*†Journal Unit Package	1	12	4
V4-13-25.	*Bolt, flange			7
V4-13-26.	*Nut, flange bolt			3½
V4-13-27.	*Lock Washer, flange bolt			3½
V4-13-13.	Metal Cover, prop shaft	11		6

*Plus 25%.

†Includes Journal assembly, four bearing race assemblies and four circlips.

REAR AXLE

V4-14-5.	U Bolt	2	0	
V4-14-2.	U Bolt, with shock absorber fixing	5	6	
V4-14-11.	Drive Gear and Pinion Assy. complete, comprising:— drive gear, pinion gear, nut, cotter, bolts and lock straps	10	8	9
V4-14-12.	Gear Carrier Cover Assembly		9	8
V4-14-13.	Companion Flange Assembly	1	2	6
V4-14-14.	Rear Hub Assembly	2	17	6
V4-14-15.	Hub Oil Seal Assembly		6	0
V4-14-16.	Diff. Case Assembly	7	9	0
V4-14-17.	Diff. Case Brg. Cap Bolt			8
V4-14-18.	" " " " Lock Washer			2
V4-14-19.	Drive Gear Bolt			9
V4-14-20.	" " " " Lock Strap			3
V4-14-21.	Diff. Case	3	15	0
V4-14-22.	" " Case Side Gear	1	5	0
V4-14-23.	" " " " Thrust Washer... ..			6
V4-14-24.	" " " " Pinion Mate		12	6
V4-14-25.	" " " " Thrust Washer			4
V4-14-26.	" " " " Shaft		7	4
V4-14-27.	" " " " Lock Pin			4
V4-14-28.	Axle Shaft Spacer		7	0
V4-14-29.	Diff. Bearing Shims .003"			3
V4-14-30.	" " " " .005"			3
V4-14-31.	" " " " .010"			3
V4-14-32.	" " " " .030"			3

Part Number	Description	Price		
		£	s.	d.
V4-14-33.	Pinion Adj. Shim. .003" Inner			3
V4-14-34.	" " " " .005" "			3
V4-14-35.	" " " " .010" "			3
V4-14-36.	" " Brg. Adj. Shim .003" Outer			3
V4-14-37.	" " " " .005" "			3
V4-14-38.	" " " " .010" "			3
V4-14-39.	" " " " .030" "			3
V4-14-40.	" " Bearing Spacer	3	4	
V4-14-41.	" " Oil Slinger			3
V4-14-42.	" " Seal	4	8	
V4-14-43.	" " " " Gasket			2
V4-14-44.	Dust Shield			6
V4-14-45.	Pinion Nut	1	4	
V4-14-46.	" " Washer			3
V4-14-48.	Axle Shaft	3	5	0
V4-14-49.	" " " Nut			1
V4-14-50.	" " " Washer			3
V4-14-52.	" " " Key			1
V4-14-53.	" " " Oil Seal			3
V4-14-54.	Hub Bearing Retainer Plate	1	4	
V4-14-55.	" " " Shim, .003"			4
V4-14-56.	" " " " .005"			3
V4-14-57.	" " " " .010"			3
V4-14-58.	" " " " .030"			8
V4-14-59.	" " Oil Seal Gasket			2
V4-14-60.	Brake Back Plate Bolts... ..			3
V4-14-61.	" " " " Nut			2
V4-14-62.	" " " " Lockwasher... ..			2
V4-14-63.	Filler and Drain Plug			10
V4-14-64.	Gear Carrier Cover	8	10	
V4-14-65.	Cover Gasket	1	0	
V4-14-66.	Cover Screw			3
V4-14-68.	Hub Bearing Grease Nipple	2	0	
V4-14-69.	Diff. Bearing Cap	12	6	
V4-14-70.	" " Bearing	2	9	0
V4-14-71.	Pinion Bearing—Outer	2	2	3
V4-14-72.	" " " Inner	2	10	6
V4-14-73.	Axle Shaft Bearing	1	7	7

NOTE.—From and including V4-14-11 add 5% (excluding Bearings)

BODY DETAILS

MUDGUARDS

V4-15-107.	Mudguard, front—R.H.	8	8	9
V4-15-107A.	" " " " L.H.	8	8	9
V4-15-109.	" " rear—R.H.	6	3	9
V4-15-108.	" " " " L.H.	6	3	9
V4-15-31/31A.	Tread Rubber Aluminium Moulding with Screws and Nuts			6
V4-1-95/6.	Valance Stay—front, R.H.	3	0	
V4-1-97/98.	" " " " L.H.	3	0	
V4-15-87.	Valance Stay, rear	2	6	
V4-1-93.	Stay, main, front	3	0	

Part Number	Description	Price £ s. d.
BONNET		
V4-15-121.	Bonnet c/w hinge and fasteners, 2-Str. and 4-Str. ...	7 10 0
V4-15-122.	" " " " Coupe ...	7 10 0
V4-15-96/7/8.	Bonnet Hinge with Chrome Strip Complete ...	1 15 0
V4-15-97.	Hinge End Piece ...	2 6
V4-15-67.	Bonnet Fastener Assembly ...	7 5
V4-15-169.	Knob only ...	2 6
V4-15-103.	Buffer Stop ...	2
WINDSCREEN		
V4-15-110.	Windscreen c/w brackets, 2-Str. ...	13 12 0
V4-15-125.	" " " " 4-Str. ...	11 16 6
V4-15-111.	" " " " Coupe ...	8 7 6
V4-15-139.	Screen Pillar—R.H., 2 or 4-Str. (pair) ...	4 0 0
V4-15-140.	" " " " L.H. " " ...	4 0 0
V4-15-143.	Rubber Pad, screen pillar (pair) ...	4 0
V4-15-141.	Screw, screen pillar ...	4
V4-15-142.	Bolt and Nut, fixing ...	3
V4-15-144.	Lift-the-dot Stud—top rail ...	5
V4-15-145.	Knurled nut windscreen ...	5 0
V4-15-114.	Side Window Coupe—R.H. ...	5 2 0
V4-15-115.	" " " " L.H. ...	5 2 0
V4-15-138.	Rear Window, hood, coupe ...	3 7 6
SIDESCREENS		
V4-15-112.	Sidescreen—R.H. 2-Str. (pair) ...	14 10 0
V4-15-113.	" " " " L.H. " " ...	14 10 0
V4-15-126.	" " " " front R.H. 4-Str. ...	17 10 0
V4-15-128.	" " " " rear R.H. " " ...	
V4-15-127.	" " " " front L.H. " " ...	
V4-15-129.	" " " " rear L.H. " " ...	7 6
V4-15-164.	Knurled Nut, fixing ...	
DOORS		
V4-15-37.	Door Lock—Coupe, R. or L. ...	1 10 0
V4-15-36.	Handle, outside, Coupe R. or L. ...	9 6
V4-15-167.	" " " " inside " " ...	5 0
V4-15-38.	Striker Plate ...	5 0
V4-15-39.	Door Lock, 2- and 4-Str., R. or L. ...	15 0
V4-15-123.	Handle, outside, 2- and 4-Str., R. or L. ...	15 0
V4-15-40.	Striker Plate ...	3 6
V4-15-162.	Hinge, door, Coupe ...	8 6
V4-15-163.	" " " " 2-Str. and 4-Str. ...	5 0
V4-15-166.	Strap, door stop, Coupe ...	6 6
V4-15-155.	Dovetail Rubber ...	1 3
SEATS AND SQUABS		
V4-15-133.	Seat frame, 4-Str.—R.H. ...	4 16 3
V4-15-134.	" " " " L.H. ...	4 16 3
V4-15-135.	" " Cushion, 4-Str., front (Purchase Tax 7/-) ...	2 17 6
V4-15-136.	" " " " rear (Purchase Tax 13/10) ...	3 15 0
V4-15-170.	" " Complete, 2-Str. and Coupe (Purchase Tax 10/6) ...	3 17 6

Part Number	Description	Price £ s. d.
V4-15-43.	Cushion Interior, air ...	1 5 0
V4-15-23.	Clamp Plate, Adjustment ...	1 6
V4-15-161.	Seat Runner ...	4 6
V4-15-90.	Squab, 2-Str. and Coupe (Purchase Tax 10/4) ...	12 10 0
V4-15-137.	" " 4-Str. (Purchase Tax 6/7) ...	3 7 6
BUMPERS		
V4-15-159.	Bumper—front ...	10 15 0
V4-15-160.	" " rear (pair) ...	4 5 0
FACIA		
V4-15-149.	Facia Board, 2- and 4-Str. ...	2 17 6
V4-15-150.	" " " " Coupe ...	2 17 6
MISCELLANEOUS		
V4-17-33.	Licence Holder ...	3 9
V4-17-30.	Driving Mirror ...	10 6
V4-17-29.	Towing Bar ...	3 10 0
V4-17-32.	Luggage Grid ...	8 10 0

Add Purchase Tax where shown

ELECTRICAL, FACIA AND PANEL SUNDRIES

V4-16-2/3/4/14.	Lamp Bar with support tubes, Coupe ...	2 10 0
V4-16-14.	" " " " " " 2-Str. and 4-Str. ...	3 10 0
V4-16-14.	" " " " " " Coupe ...	3 0 0
V4-16-11.	" " " " " " 2-Str. and 4-Str. ...	2 0 0
V4-16-11.	Support Tubes and Lugs ...	12 0
V4-16-31.	Speedometer Flexible Drive ...	1 5 6
V4-16-31/1.	Speedometer Inner Cable on Outer Casing only ...	12 9
V4-16-60.	Choke Control ...	5 9

Lamps and other electricalities, Facia and Panel Instruments, as makers' lists

NOTE.—Most items can be exchanged for factory replacement units at exchange prices

TOOLS

V4-17-14.	Jack ...	1 10 0
V4-17-23.	Starting Handle ...	15 0
V4-17-23A.	" " " " for bumper ...	15 6
V4-17-15.	Tyre Inflator ...	10 0
V4-17-17.	Oil Can ...	3 6
V4-17-31.	Tool Kit complete (includes following separate tools) ...	2 12 6
V4-17-18.	Tool Roll ...	3 0
V4-17-16.	Grease Gun ...	8 9
V4-17-24.	Feeler Gauge ...	1 3

Part Number	Description	Price		
		£	s.	d.
V4-17-25.	Tube Spanner	2	6	
V4-17-26.	" " " " " " " "	2	6	
V4-17-27.	Open Ended Spanner	2	6	
V4-17-28.	" " " " " " " "	2	6	
V4-17-1.	Tyre Lever (2)	3	0	
V4-17-2.	Valve Tool	4		
V4-17-4.	Hammer	4	0	
V4-17-5.	Pliers	3	9	
V4-17-6.	Screwdriver	2	0	
V4-17-8.	Tommy Bar	6		
V4-17-9.	3/16 x 1/4 Spanner	1	6	
V4-17-10.	5/16 x 3/8 " " " " " "	2	3	
V4-17-11.	7/16 x 1/2 " " " " " "	3	0	
V4-17-12.	Adjustable Spanner	6	0	
V4-17-13.	Wheel Nut Spanner	2	6	
V4-17-7.	Plug Spanner	5	0	